


TIRE PRESSURE WARNING RECEIVER (w/ Antenna)


COMPONENTS

w/o Rear No. 2 Seat

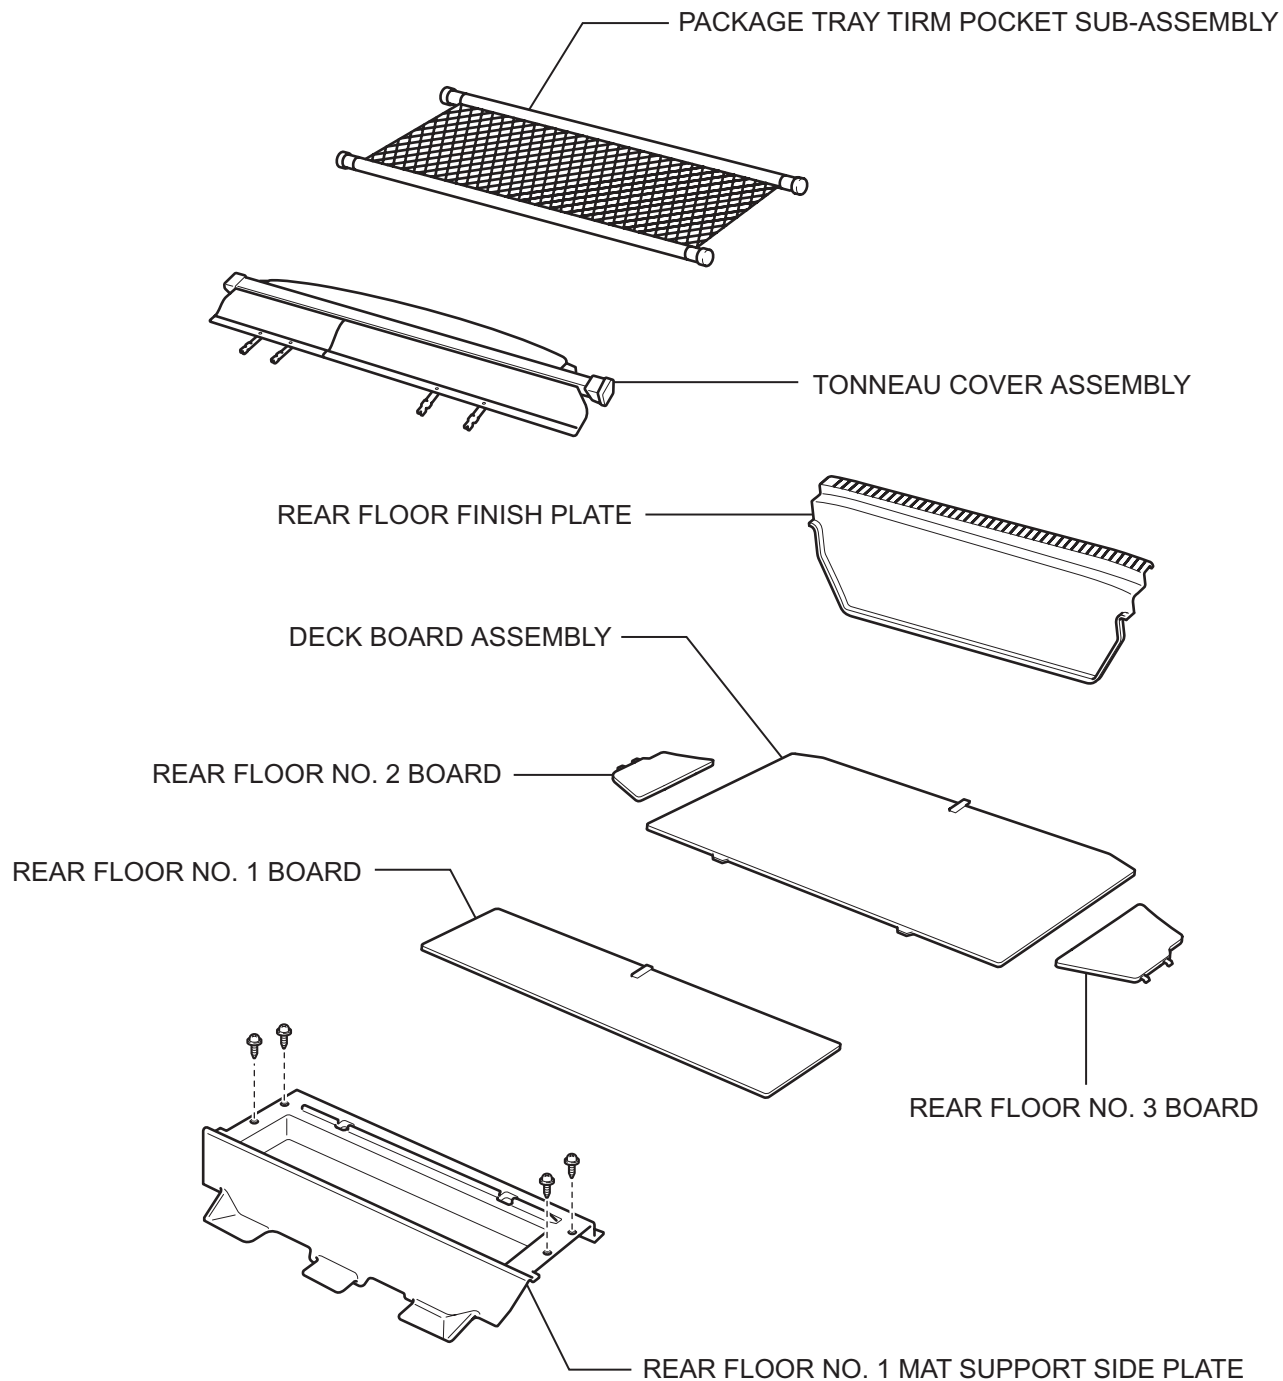


TW

w/ Rear No. 2 Seat

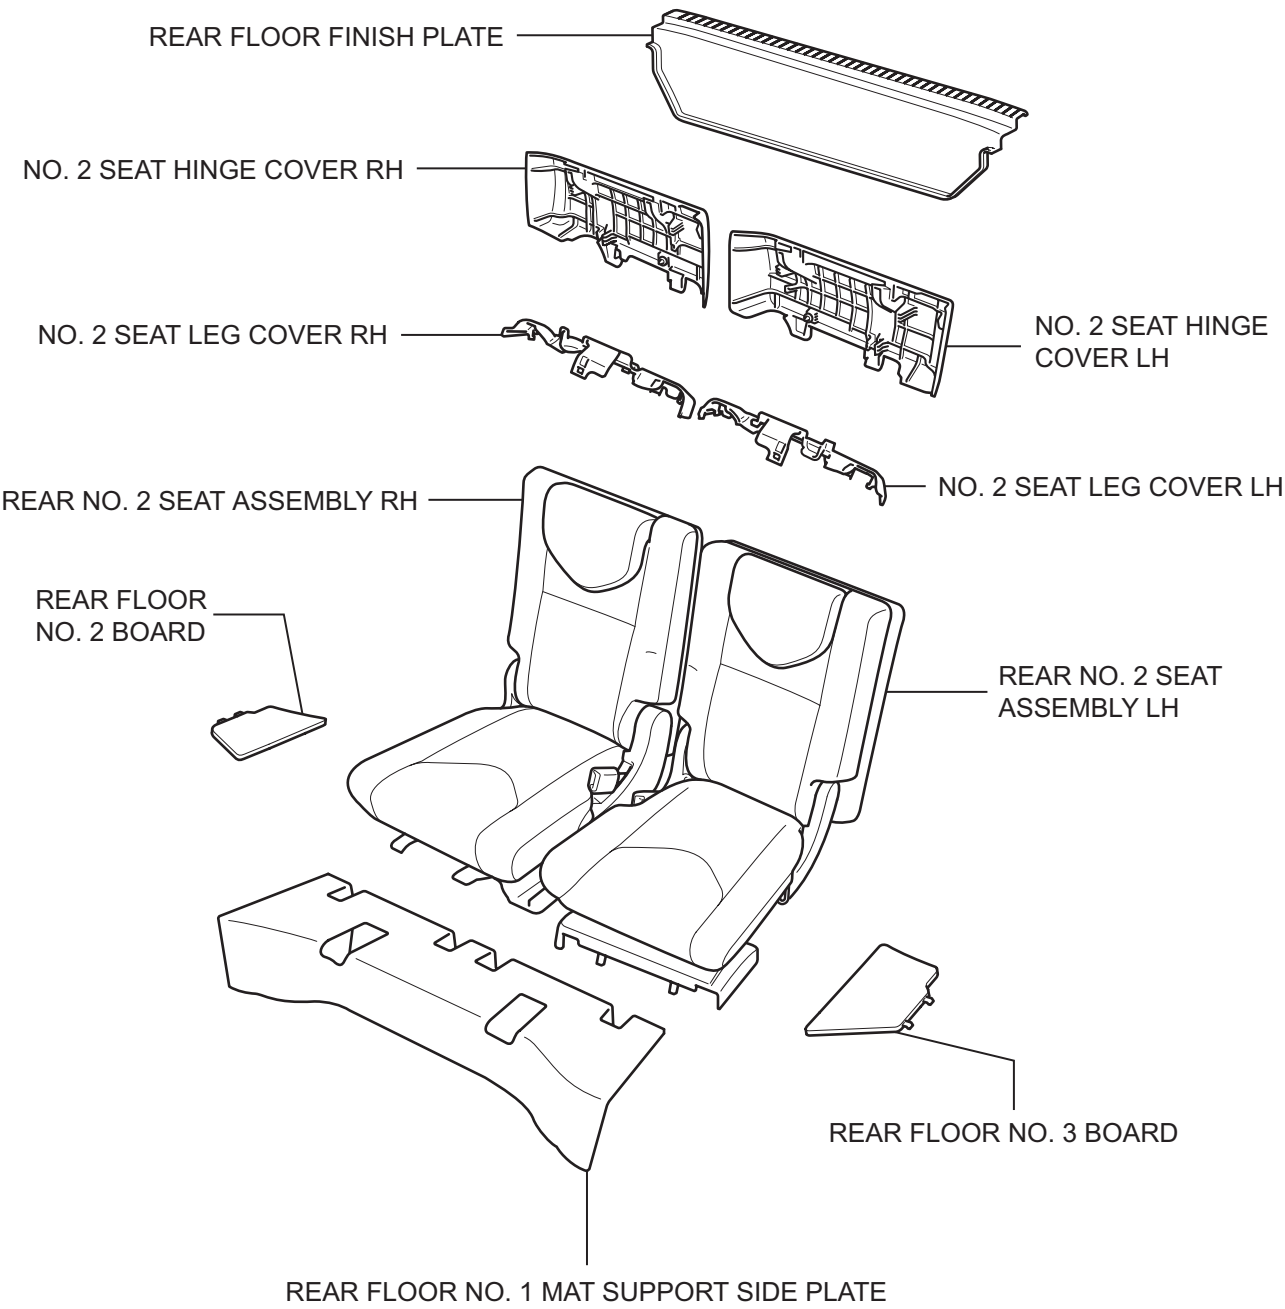

TW


w/o Rear No. 2 Seat

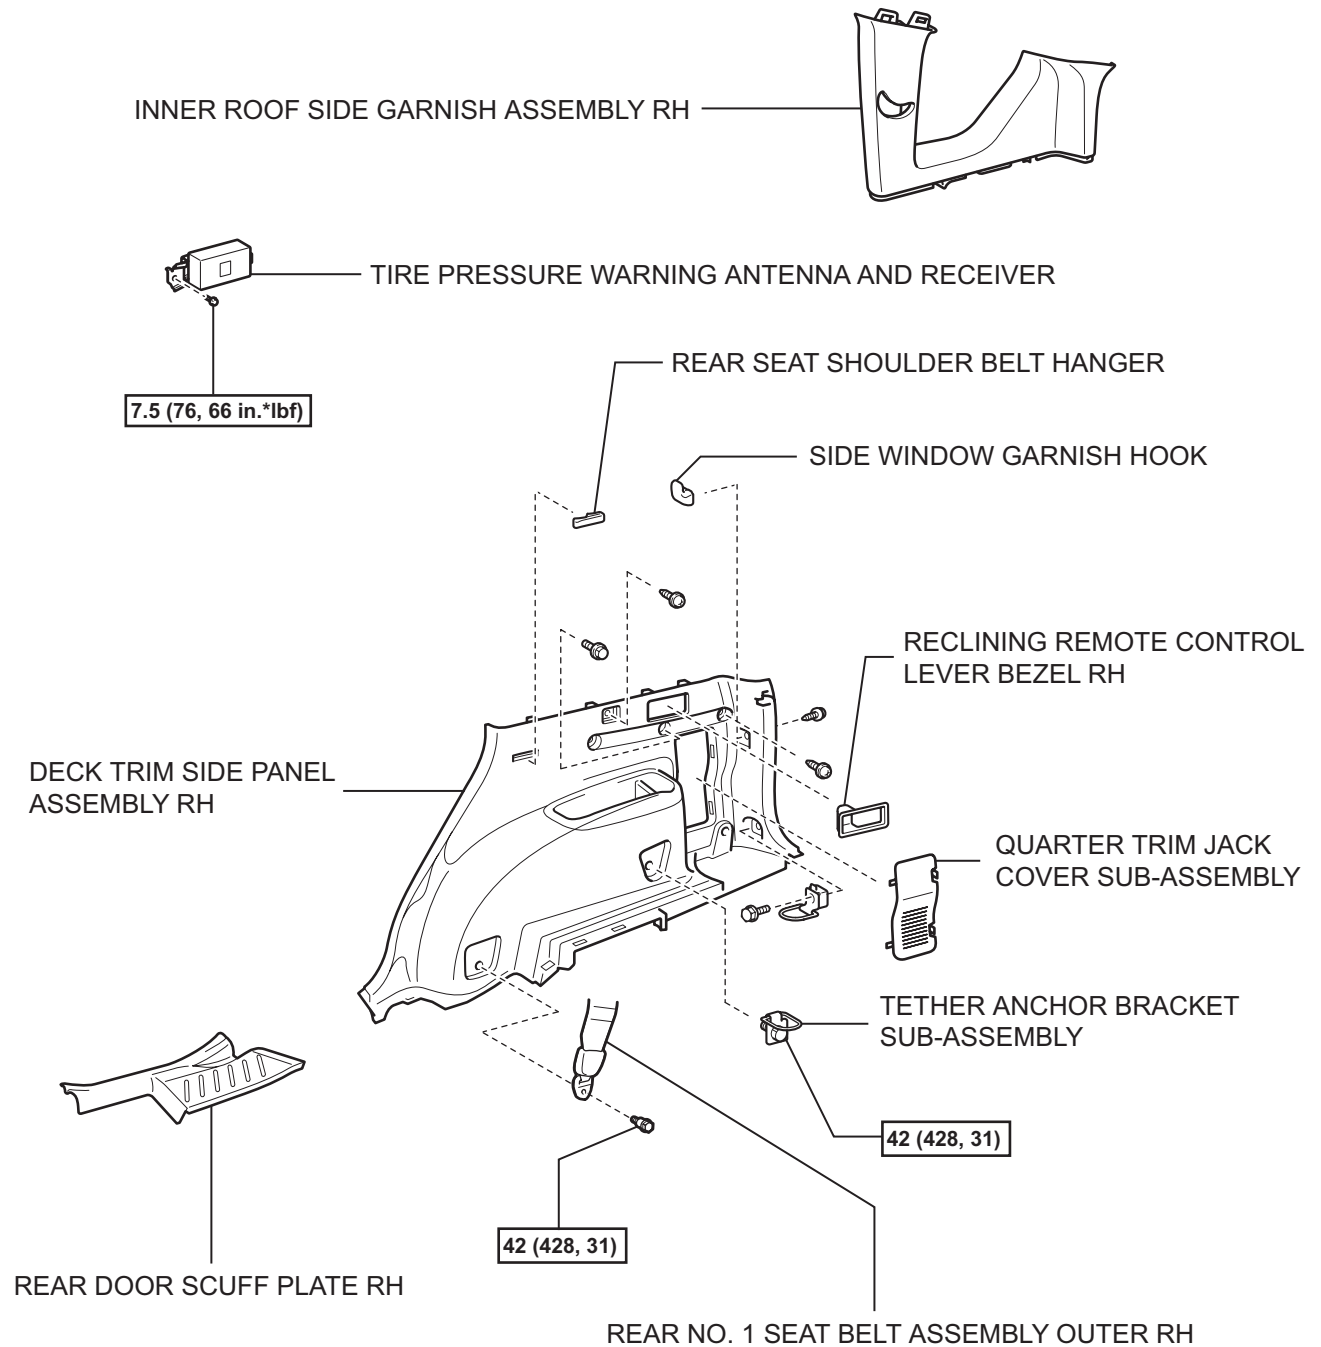

N*m (kgf*cm, ft.*lbf) : Specified torque

TW

w/ Rear No. 2 Seat

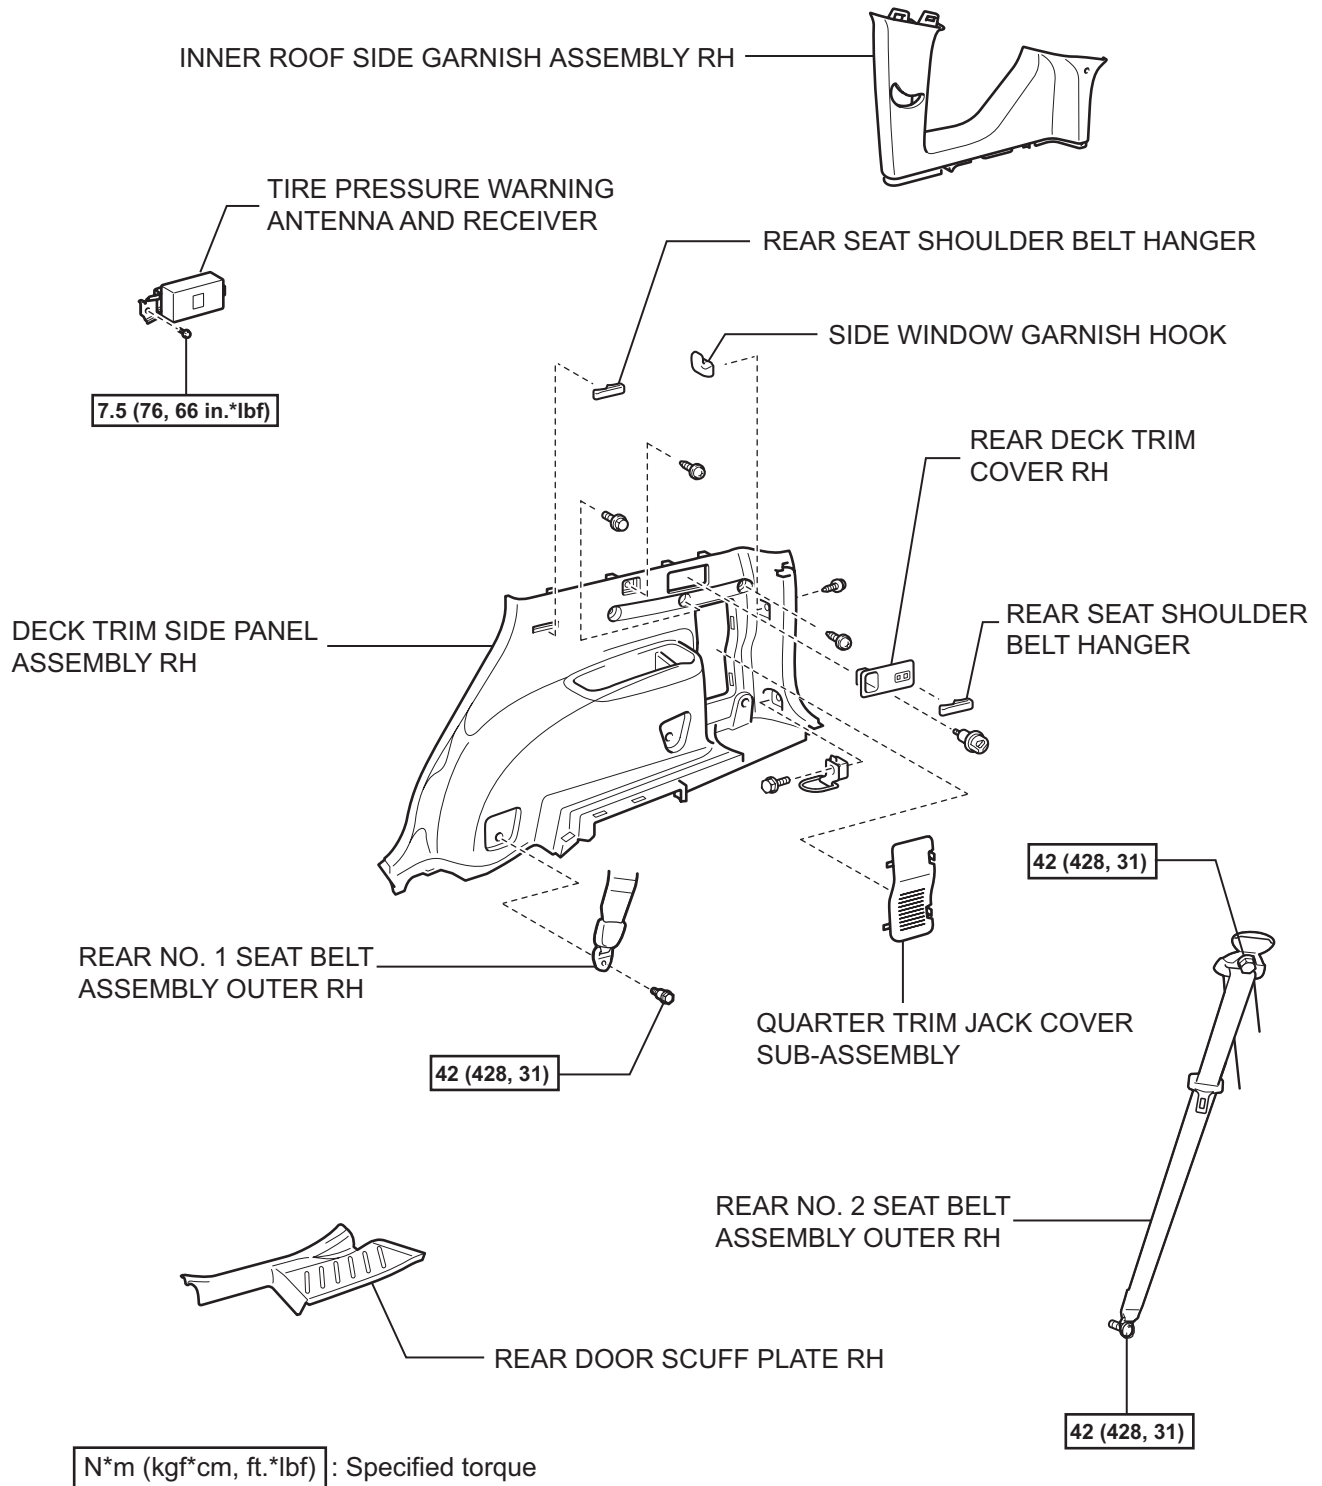



REMOVAL

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL
CAUTION:
Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.
2. REMOVE REAR DOOR SCUFF PLATE RH (See page [IR-29](#))
3. REMOVE PACKAGE TRAY TRIM POCKET SUB-ASSEMBLY (w/o Rear No. 2 Seat)
4. REMOVE TONNEAU COVER ASSEMBLY (w/o Rear No. 2 Seat)
5. REMOVE REAR FLOOR NO. 1 BOARD (w/o Rear No. 2 Seat)
6. REMOVE DECK BOARD ASSEMBLY (w/o Rear No. 2 Seat)
7. REMOVE NO. 2 SEAT HINGE COVER LH (w/ Rear No. 2 Seat) (See page [SE-109](#))
8. REMOVE NO. 2 SEAT HINGE COVER RH (w/ Rear No. 2 Seat) (See page [IR-30](#))
9. REMOVE NO. 2 SEAT LEG COVER LH (w/ Rear No. 2 Seat) (See page [SE-109](#))
10. REMOVE NO. 2 SEAT LEG COVER RH (w/ Rear No. 2 Seat) (See page [IR-30](#))
11. REMOVE REAR NO. 2 SEAT ASSEMBLY LH (w/ Rear No. 2 Seat) (See page [SE-110](#))
12. REMOVE REAR NO. 2 SEAT ASSEMBLY RH (w/ Rear No. 2 Seat) (See page [IR-30](#))
13. REMOVE REAR FLOOR NO. 3 BOARD
14. REMOVE REAR FLOOR NO. 2 BOARD
15. REMOVE REAR FLOOR NO. 1 MAT SUPPORT SIDE PLATE (See page [IR-31](#))
16. REMOVE REAR FLOOR FINISH PLATE (See page [IR-31](#))
17. REMOVE REAR DECK TRIM COVER RH (w/ Rear No. 2 Seat) (See page [IR-31](#))
18. REMOVE RECLINING REMOTE CONTROL LEVER BEZEL RH (w/o Rear No. 2 Seat) (See page [SE-80](#))
19. REMOVE TETHER ANCHOR BRACKET SUB-ASSEMBLY (w/o Rear No. 2 Seat) (See page [IR-32](#))
20. REMOVE DECK TRIM SIDE PANEL ASSEMBLY RH (w/o Rear No. 2 Seat) (See page [IR-33](#))
21. REMOVE DECK TRIM SIDE PANEL ASSEMBLY RH (w/ Rear No. 2 Seat) (See page [IR-34](#))

22. REMOVE INNER ROOF SIDE GARNISH ASSEMBLY RH (See page [IR-35](#))

23. REMOVE TIRE PRESSURE WARNING ANTENNA AND RECEIVER

- (a) Disconnect the connector.
- (b) Remove the bolt and receiver.

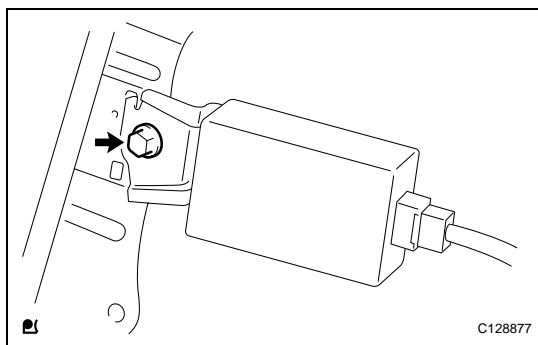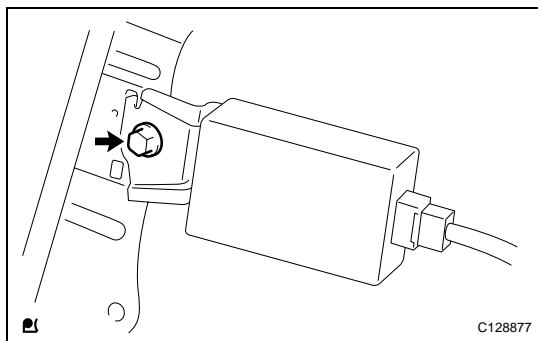

INSTALLATION

1. INSTALL TIRE PRESSURE WARNING ANTENNA AND RECEIVER

- (a) Install the receiver with the bolt.
Torque: 7.5 N*m (76 kgf*cm, 66 in.*lbf)
- (b) Connect the connector.

2. INSTALL INNER ROOF SIDE GARNISH ASSEMBLY RH (See page [IR-52](#))

3. INSTALL DECK TRIM SIDE PANEL ASSEMBLY RH (w/o Rear No. 2 Seat) (See page [IR-53](#))

4. INSTALL DECK TRIM SIDE PANEL ASSEMBLY RH (w/ Rear No. 2 Seat) (See page [IR-54](#))

5. INSTALL TETHER ANCHOR BRACKET SUB-ASSEMBLY (w/o Rear No. 2 Seat) (See page [IR-54](#))

6. INSTALL RECLINING REMOTE CONTROL LEVER BEZEL RH (w/o Rear No. 2 Seat) (See page [SE-105](#))

7. INSTALL REAR DECK TRIM COVER RH (w/ Rear No. 2 Seat) (See page [IR-55](#))

8. INSTALL REAR FLOOR FINISH PLATE (See page [IR-55](#))

9. INSTALL REAR FLOOR NO. 1 MAT SUPPORT SIDE PLATE (See page [IR-55](#))

10. INSTALL REAR FLOOR NO. 2 BOARD

11. INSTALL REAR FLOOR NO. 3 BOARD

12. INSTALL REAR NO. 2 SEAT ASSEMBLY LH (w/ Rear No. 2 Seat) (See page [SE-121](#))

13. INSTALL REAR NO. 2 SEAT ASSEMBLY RH (w/ Rear No. 2 Seat) (See page [IR-55](#))

14. INSTALL NO. 2 SEAT LEG COVER LH (w/ Rear No. 2 Seat) (See page [SE-123](#))

15. INSTALL NO. 2 SEAT LEG COVER RH (w/ Rear No. 2 Seat) (See page [IR-56](#))
16. INSTALL NO. 2 SEAT HINGE COVER LH (w/ Rear No. 2 Seat) (See page [SE-123](#))
17. INSTALL NO. 2 SEAT HINGE COVER RH (w/ Rear No. 2 Seat) (See page [IR-56](#))
18. INSTALL DECK BOARD ASSEMBLY (w/o Rear No. 2 Seat)
19. INSTALL REAR FLOOR NO. 1 BOARD (w/o Rear No. 2 Seat)
20. INSTALL TONNEAU COVER ASSEMBLY (w/o Rear No. 2 Seat)
21. INSTALL PACKAGE TRAY TIRM POCKET SUB-ASSEMBLY (w/o Rear No. 2 Seat)
22. INSTALL REAR DOOR SCUFF PLATE RH (See page [IR-57](#))
23. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL
24. REGISTER TRANSMITTER ID (See page [TW-10](#))
25. INSPECT TIRE PRESSURE WARNING SYSTEM